

BG-Series (Below Grade)

INSTALLATION INSTRUCTIONS

Material Preparation

1. Deviations, spalls, and irregularities should be addressed, and repairs made in compliance with the manufacturer's specification.
-

Storage Conditions

1. Store at 40°-90° F (5°-32° C). For best results, allow seal glad to relax prior to installation of the system eliminating and folds or wrinkles in the seal wings.

Material Installation

1. Measure and cut seal to desired length to be used. (If direction changes occur, fabricate the heat weld prior to installation of the seal)
2. Apply wet waterproofing membrane mastic on both sides of the joint opening (12" minimum for wings of seal to be placed in).
3. Place BG-Series into the wet waterproofing membrane mastic with the dual chamber center inserted into the intended joint opening.
4. Once the BG-Series is in place and all directional changes are taken care of, anchor the wings using the supplied termination bars and concrete screws (minimum 12" O.C. both sides). Butt the termination bar against the body of the seal along the extruded edges.
5. Once all the termination bars are anchored, apply the waterproofing membrane over top of the seal wings (including the termination bars and anchors) up to the center dual chamber of the seal.
6. Installation of the waterproofing membrane shall be in accordance with the waterproofing membrane manufacturer's written instructions.