


- Align aluminum top plate with gasket material in front of bottom plate. Using the palm of your hand, gently tap aluminum top plate onto the aluminum bottom plate. It should click into place all along the length of the top plate. Repeat on opposite side. When installing, exercise care not to damage top plate.

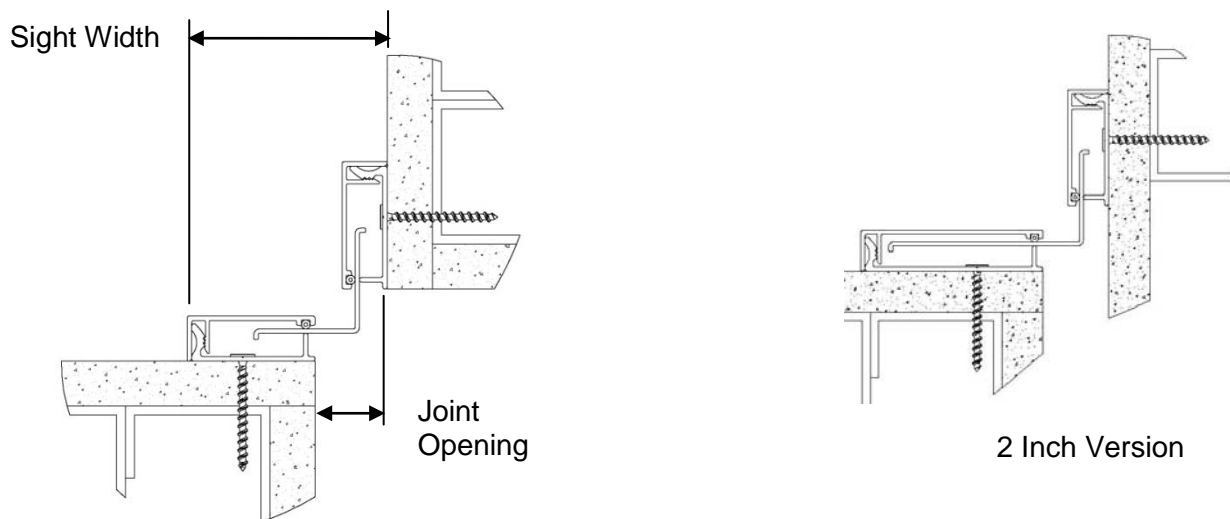

### Operation:

Expansion joints are designed and built for years of dependable service.

### Maintenance:

- Expansion Joints should be cleaned routinely.
- Exposed surfaces can be cleaned with a mild water-based cleaning solution. Wipe clean with a sponge or soft cloth.
- Do not use steel wool or powdered abrasive cleaners as they will scratch the aluminum surface.
- If any questions arise during the operation or maintenance of the products, please feel free to call for assistance (716-542-3991)